

EasyColor EasyLife App

User Manual (en)

EasyColor iOS App detailed introduction

1 Connect the controller

Open [Settings], then [Wi-Fi], connect to the WiFi with the name "EasyColor" or other Sunricher wireless products, and the default wireless password is "0123456789". After connecting to WiFi, you can turn on EasyColor to start controlling the lights.









2 Feature introduction

After opening the software, the software interface is as shown in the UI below:



The main features are described below:

- 1) 
To change the color of the light, click or slide your finger on it to change the color of the light.
- 2) 
Turn the lights on or off.
- 3) 
R: Red switch, used to close or open the red channel of the light.
- 4) 

G: Green switch, used to close or open the green channel of the light.



B: Blue switch, used to close or open the blue channel of the light.



White light switch, used to turn on or off the white light.



Turn on or off the running mode.



Slow down or speed up running speed.



Make the light return to the last state.



Reduce or increase the brightness of the light.




Use storage mode or store current mode.

Short press "S" and then press the number button below, the mode stored by the corresponding number button will be used. If the corresponding number button has no storage mode, there will be no response.

Long press "S" and then press the number button below, the current mode will be stored on the corresponding number, whichever is the most recent one.

3 Settings

In the settings, you can select the lights that need to be controlled, or delete or add lights that need to be controlled.

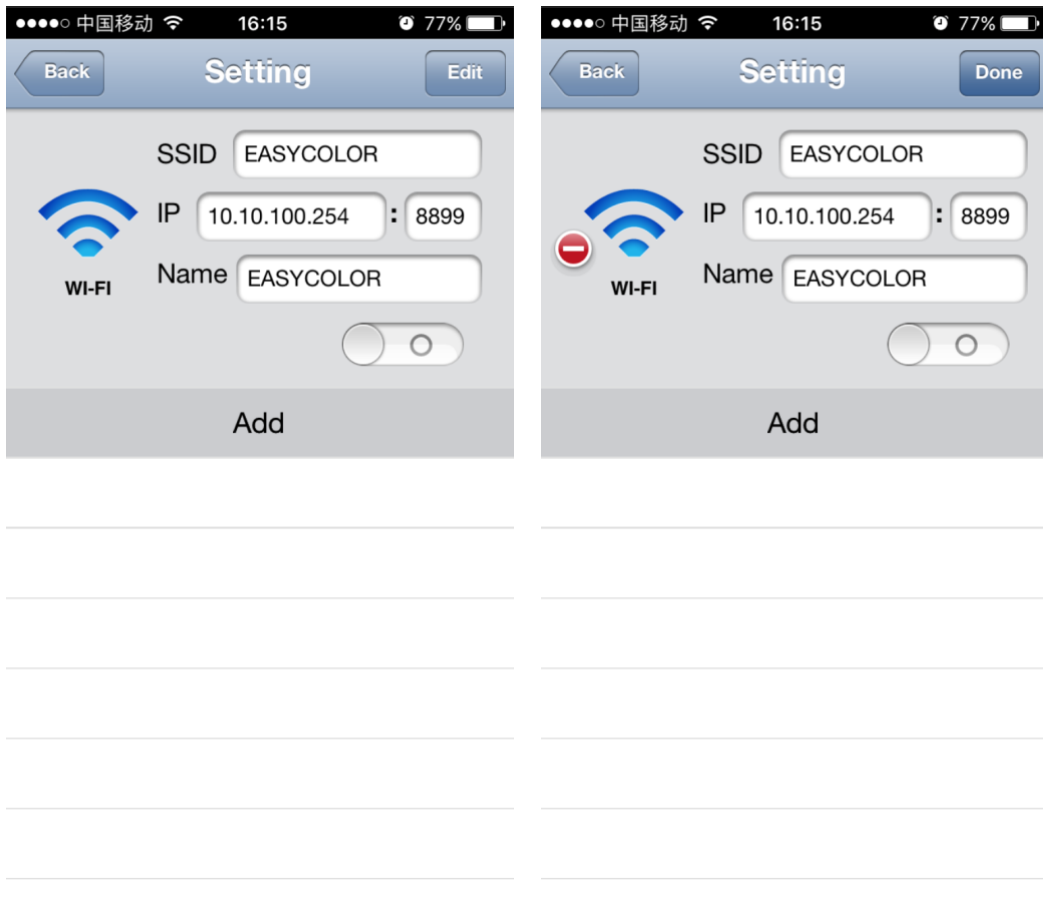

【Edit】

Enter edit mode

【Done】

Save edited content

【SSID】

SSID of light or controller

【IP】

It is not recommended to modify the IP and port of the lamp or controller, which may cause uncontrollable


【Name】

The name of the lamp or the controller can be customized

【Add】

Add lights or controllers

4 Common problem

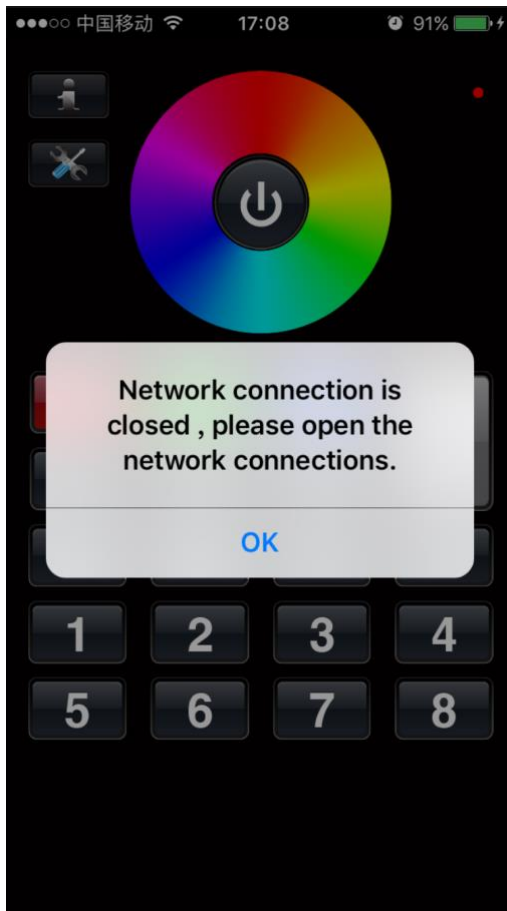

If after opening the software, a prompt like the above figure appears, you need to check whether it is connected to the correct network. If the connected network is correct, but this prompt still appears, exit all software and reopen this software. If the problem persists, power off the lamp or controller for 10 seconds and then power on.